Atlas EV Charger 7/11kW

USER MANUAL





Περιεχόμενα

1	Εξαρτήματα και Χαρακτηριστικά
2	Οδηγίες Εγκατάστασης
5	Οδηγίες Λειτουργίας
5	1 Εφαρμογή
6	2 Ρύθμιση Δικτύου
7	3 Διαχείριση Μελών
8	4 Ρύθμιση βύσματος και φόρτισης
9	5 Έναρξη φόρτισης
11	Βασικές Πληροφορίες

Εξαρτήματα και Χαρακτηριστικά



- Περιοχή σάρωσης κάρτας: Είναι η περιοχή όπου σύρετε την κάρτα και μπορείτε να σαρώσετε την κάρτα φόρτισης που προσθέσατε. Το ATLAS θα διαβάσει τα δεδομένα στην κάρτα φόρτισης για να ξεκινήσει ή να σταματήσει τη φόρτιση.
- ② Φωτισμός ένδειξης: ο φωτισμός ένδειξης υποδεικνύει την κατάσταση του φορτιστή σε πραγματικό χρόνο με διαφορετικά χρώματα.
- ③ Πιστόλι φόρτισης: Συνδέστε το πιστόλι φόρτισης στην υποδοχή φόρτισης του ηλεκτρικού οχήματος πριν από τη φόρτιση και, στη συνέχεια, συνδέστε το φορτιστή ΗΟ ξανά στη βάση του φορτιστή μετά την ολοκλήρωση της φόρτισης.
- (4) Καλώδιο εισόδου του φορτιστή: Η τροφοδοσία ΕΡ θα παρέχεται μέσω του καλωδίου στον φορτιστή.
- ⑤ Πρίζα φόρτισης: Συνδέστε ένα εξωτερικό πιστόλι φόρτισης στην πρίζα πριν ξεκινήσετε τη φόρτιση.

Οδηγίες εγκατάστασης







Οδηγίες λειτουργίας

1. Κατεβάστε την εφαρμογή, εγγραφείτε, προσθέστε φορτιστή και την κάρτα

(1) Κατεβάστε την εφαρμογή Σαρώστε τον κωδικό QR στα δεξιά μέσω smart phone για να κατεβάσετε το λογισμικό ελέγχου «EVcharging» (Φόρτιση HO) του φορτιστή.	Compared and the second s
 (2) Προσθέστε φορτιστή Log in (Σύνδεση)> My charging (Η φόρτισή μου) > Add charger (Προσθήκη φορτιστή)> scan QR code on the charger (σάρωση κωδικού QR στον φορτιστή)> ελέγξτε τον σειριακό αριθμό > name the charger (ονομάστε τον φορτιστή) 	My chargers Image: Chargers
 (3) Προσθήκη κάρτας φόρτισης Me (Εγώ)> My card (Η κάρτα μου)> add (προσθήκη)> εισαγάγετε τις ακόλουθες πληροφορίες σύμφωνα με τις οδηγίες: Contract ID (Αναγνωριστικός κωδικός σύμβασης) Password (Κωδικός πρόσβασης) 	C Hog card Sind a new card Bind a new card Name information the fits many charge card. Control Permote Control

2. Ρύθμιση δικτύου

Ο φορτιστής όταν είναι συνδεδεμένος στο διαδίκτυο μπορεί να συνδεθεί στον διακομιστή. Όλες οι λειτουργίες, συμπεριλαμβανομένης της έναρξης και της διακοπής, ελέγχονται με εντολές από τον διακομιστή, επομένως ο φορτιστής μπορεί να ελεγχθεί εξ αποστάσεως μέσω της εφαρμογής και οι εντολές φόρτισης και τα δεδομένα θα συγχρονιστούν με τον διακομιστή.

Όταν δεν είναι συνδεδεμένος στο διαδίκτυο, όλες οι λειτουργίες, συμπεριλαμβανομένης της έναρξης και της διακοπής, ελέγχονται από το Bluetooth του κινητού. Έτσι, ο φορτιστής μπορεί να ελέγχεται από την εφαρμογή όταν το κινητό βρίσκεται κοντά στον φορτιστή (συνιστάται να βρίσκεται σε απόσταση 5 μέτρων)

(1) Σύνδεση του φορτιστή στο διαδίκτυο

Μόνο ο κάτοχος του φορτιστή μπορεί να ρυθμίσει το διαδίκτυο για τον φορτιστή. Κατά τη ρύθμιση του διαδικτύου, η λειτουργία Bluetooth θα πρέπει να είναι ενεργοποιημένη για το smart phone και το smart phone πρέπει να βρίσκεται σε απόσταση 5 μέτρων από τον φορτιστή.

My chargers (Οι φορτιστές μου) --> Select a charger (Επιλέξτε φορτιστή) --> Network settings (Ρυθμίσεις δικτύου) --> επιλέξτε λειτουργία σύνδεσης δικτύου και εισαγάγετε πληροφορίες δικτύου

test62 🖄 sszoceseccez		
	联间选择	WIFI >
exterptoy	WIFI名称	>
	WIFI密码	>
SOCKET		
tings	۵	
mity Members Network settings Char	ging mode	
art charging		
cad Balance Energy Plan		
Map My chargers	0.2	

3. Διαχείριση μελών

 Κοινή χρήση του φορτιστή με τα μέλη της οικογένειας και τους φίλους σας

Μόνο ο κάτοχος του φορτιστή μπορεί να ενεργοποιήσει την κοινή χρήση του φορτιστή με μέλη της οικογένειας και τους φίλους. Κατά τη ρύθμιση της κοινής χρήσης, η λειτουργία Bluetooth θα πρέπει να είναι ενεργοποιημένη για το smart phone και το smart phone πρέπει να βρίσκεται σε απόσταση 5 μέτρων από τον φορτιστή.

My chargers (Οι φορτιστές μου) --> Select a charger (Επιλέξτε φορτιστή) --> Family Members (Μέλη οικογένειας) --> Add (Προσθήκη) --> Enter member's name (Εισαγάγετε το όνομα μέλους) --> OK

test62		wcharging_test	Me
5520063400062			
entrophy	0	est	0
50 600000			
۲			
(Contine) (D) (C) (C)			
SOCKET SAC_1_PHASE 100.0WW			
Æ	0		
Network settings Charg	ping mode		
rging			
8			
nce Energy Plan			
		A44	
My chargers	Ř. L		

4. Ρύθμιση βύσματος και φόρτισης

(1) Ρύθμιση λειτουργίας βύσματος και φόρτισης

Μόνο ο κάτοχος του φορτιστή μπορεί να ρυθμίσει τη λειτουργία βύσματος και φόρτισης. Κατά τη ρύθμιση, η λειτουργία Bluetooth θα πρέπει να είναι ενεργοποιημένη για το smart phone και το smart phone πρέπει να βρίσκεται σε απόσταση 5 μέτρων από τον φορτιστή.

Μετά την ενεργοποίηση αυτής της λειτουργίας, το ηλεκτρικό όχημα φορτίζεται αυτόματα κατά τη σύνδεση με τον φορτιστή.

Σημείωση: όλα τα συνδεδεμένα ηλεκτρικά οχήματα μπορούν να φορτιστούν.

My chargers (Οι φορτιστές μου) --> Select a charger (Επιλέξτε φορτιστή) --> Charging mode (Λειτουργία φόρτισης) --> Edit (Επεξεργασία) --> Plug charging (Mode) (Φόρτιση με βύσμα) (Λειτουργία)-->Save (Αποθήκευση)

My charners +	1	Charping mode
	Mode	Plug charging >
test62 La sszonawoonez		
SOCKET Start		
Settings		
Family Members Network settings Charging mode		
<u>لا</u> ا		
Load balance Energy Han		
Rap Hy charges Me		Save

5. Έναρξη φόρτισης



Atlas EV Charger 7/11kW

(2) Ιδιωτικός φορτιστής

Έναρξη φόρτισης:

My chargers (Οι φορτιστές μου) --> Select a charger (Επιλέξτε φορτιστή) --> Start (Εναρξη) --> Select Charging mode (Επιλογή Λειτουργίας φόρτισης) --> Start charging (Εναρξη φόρτισης)

Τερματισμός φόρτισης:

Me (Εγώ) --> my order (η εντολή μου) --> Now (Τώρα) --> Charging page (Σελίδα φόρτισης) --> End charging (Τερματισμός φόρτισης)

Σημείωση: όταν ο φορτιστής είναι συνδεδεμένος, μπορεί να ξεκινήσει μέσω της εφαρμογής οπουδήποτε και όταν ο φορτιστής είναι εκτός σύνδεσης, μπορεί να ξεκινήσει μέσω της λειτουργίας Bluetooth του smart phone που βρίσκεται κοντά του.

Image: State Stat	tetb2 C With Wattern Wattern With Wattern Wattern With Wattern With Wattern	Image: State Stat	Image: State Stat	Image: State of the	My chargers	+
Settings Image: Set	Settings Setti	Settings Windows	Settings Windows Windows Windows Settings Windows Windows <td>Settings With Marcine With Marcine <t< td=""><td>test62 2 55206-2400062</td><td></td></t<></td>	Settings With Marcine With Marcine <t< td=""><td>test62 2 55206-2400062</td><td></td></t<>	test62 2 55206-2400062	
Constructure	Constant change	Construct charge	Contraction Contraction </td <td>Contract charge Contract charge<td></td><td></td></td>	Contract charge Contract charge <td></td> <td></td>		
Settings Settings Ourgrag mode Finds, Members Networks settings Ourgrag mode Smart charging Settings Settings Lead Blance Settings Settings Settings Settings Settings Settings Settings Settings Settings Settings Settings Settings Settings Settings Personal station, evolvarging, test Corgeng on Dis Settings Corgeng Stations Settings Nator Leage Constant charge Team Constant charge Team Team	Settings Settings Charging mode Smart charging Settings Settings Least Balance Settings Settings Settings Settings Settings Particular Settings Settings Settings Instruct charges Settings Settings Settings Named charging Settings Settings Settings Settings Named charges Settings Settings Settings Reter Named Settings Settings Settings Settings Settings <td>Settings Settings Durging mode Smart charge Settings Durging mode Lase Baarco Settings Durging mode Settings Settings Settings Settings Settings Settings</td> <td>Settings Settings Courge mode Smart charges Settings Courge mode Least Baance Settings Settings Settings Settings Settings Tend charging Settings Settings Reference Settings Settings Reference Settings Settings Settings Settings Settings</td> <td>Settings Settings Durging mode Smart Angel Settings Durging mode Settings Settings Durging Settings<!--</td--><td>Contree © COCKET AC_1PHASE 100.0000</td><td></td></td>	Settings Settings Durging mode Smart charge Settings Durging mode Lase Baarco Settings Durging mode Settings Settings Settings	Settings Settings Courge mode Smart charges Settings Courge mode Least Baance Settings Settings Settings Settings Settings Tend charging Settings Settings Reference Settings Settings Reference Settings Settings Settings Settings Settings	Settings Settings Durging mode Smart Angel Settings Durging mode Settings Settings Durging Settings </td <td>Contree © COCKET AC_1PHASE 100.0000</td> <td></td>	Contree © COCKET AC_1PHASE 100.0000	
Answer Answer Answer Smart charges Answer Durarge mode Answer Answer Answer	Image: Network setting Ourgang mode Smart charge Setting Lead Blance Setting Setting Setting	Print, Windows Print, Windows Print, Windows Samat charging Print, Windows Print, Windows Last Blance Print, Windows Print, Windows Print, Windows Print, Windows	Preserve setting Ourgang model Smart charging Setting Lead Blance Setting Setting Setting Setting Setting Setting Setting Setting Setting Setting Setting Setting Setting Personal (station, ex-charging, test Charges gate 1) Setting Setting Setting Tend charge Setting Tend charging Setting Refer Setting Hear Berner Setting Setting setting Setting Setting setting Setting	Person Person Person Same charges Person Person Lead Blance Person Parson Person Personal_station_evolvarging_test Personal_station_evolvarging_test Personal_station_evolvarging_test Personal_station_evolvarging_test Personal_station_evolvarging_test	Settings	
Smart charging Least Balance Every Plan Balance Every Plan C Charge personal Station evcharging test Charging 01: 53.00%: Charge Not 53.00%: Charge Contart charge Timed charging	Smart charging Least Balance Pergy Plan	Smart charging Lasel Bilance Every Pain	Smart charging Least Balance Derrys Plan Control Charging Derrys Plan Charging Derrys Plan Derrys Plan Dery	Smart charging Least Balance Pergy Pain Company Charging D. Stoobaddood Pergy D. Stoobaddood Charging D. Stoobaddoo	Family Members Network settings Charging mo	ode
Key Charges Charge Personal_station_evcharging_test Courge 0p: 50:500002 Courge 0p: 0:1 Ret for charge Rets for WH3D.50WH; Timed charging Timed charging		Open of the state of the st	Charge Charge Charge Charge Charge Charge compare 0: Stoodwattool compare 0: Constant charge These charge Rate for Whito 50.5Whit, Constant charge Manage	Bit Bit V Charge personal_station_evcharging_test Bit Charge Die Station personal_station_evcharging_test Bit Charge Die Station Charge Die Station Rate for charge Centratt charge Tined charging Centratt charge Tined charging Centratt charge Rate for Whide Subhriblies for minute SLOBH: Constant charge Charge Die Garge Balence papment SSSSE	Smart charging	
Charge Charge Charge personal,station,evcharging,test Oraging 0: 53300052 Conging 0: 513000052 Conging 0: 513000052 Conging 0: 513000052 Conging 0: 513000052 Conging 0: 51300005 Conging 0: 51300005 Conging 0: 5130005 Conging 0: 513005 Conging 0:		Balance payment Balance	Ber Windowski Stranger Congregory Station, evcharging, test Rate for station, factor for minute station; Education Encoded and test Station, for minute station; Education Encoded and test Station, for minute station; Education test Station, for minute station; Education payment station; Education payment station; Education	Balance Description Charge Balance Personal_station_evcharging_test Construct Corago go 0:: Construct Corago go 0:: Construct Rate for charge Construct charge Timed charging Construct charge Timed charging Construct charge Timed charging Construct charge Timed charging Construct charge Balance papement 150000 Construct		
Charge personal_station_evcharging_test model Charging ID: 552066400062 model Daging go iD: D1 model Rafe for charge model Timed charging Constant charge Timed charging	Charge personal_station_evolvarging_test Courging on D-1 Rate for WM-50.5MM; fid_mice Timed charge Rates Rates for WM-50.5MM; Constant charge	Charge personal_station_evcharging_test Charge 0: SS3005400062 Timed charging States Rate for WM-05.5MM-flate for minutes \$1.00ht; IConstant charge Balance payment \$500.00	Charge personal_station_evcharging_test Courge op 0.5 Courge op 0.6 Rate for Wh050.5MM; Tamed charge Tamed charge Rate for Wh050.5MM; Constant charge Balance payment 10000	Charge personal_station_evcharging_test Charge 05:50056400062 Coging 06:001 Coging 06:001 Coging 06:001 Coging 06:001 Timed charging Timed charging Constant charge Constant charge Eatence payment 100:00 Constant	Rap My chargen Me	
personal_station_evcharging_test Charging 05 050006200002 Charging 040 D. 1 Ref for charge Refe for XWH50.5XWH; full etcop Timed charging Timed charging	personal_station_evcharging_test Courge go D: 0: 85000420002 0: 85000420002 0: 8500040002 0: 8500040000 0: 8500040000 0: 8500040000 0: 850000000 0: 850000000 0: 8500000000 0: 8500000000 0: 8500000000 0: 8500000000 0: 8500000000 0: 8500000000 0: 8500000000 0: 8500000000 0: 8500000000 0: 8500000000 0: 8500000000 0: 850000000 0: 850000000 0: 850000000 0: 850000000 0: 850000000 0: 850000000 0: 850000000 0: 850000000 0: 850000000 0: 85000000 0: 85000000 0: 85000000 0: 85000000 0: 85000000 0: 850000000 0: 850000000 0: 85000000 0: 85000000 0: 850000000 0: 850000000 0: 850000000 0: 850000000 0: 850000000 0: 8500000000 0: 8500000000 0: 8500000000 0: 85000000000 0: 8500000000 0: 8500000000 0: 8500000000 0: 8500000000 0: 8500000000 0: 8500000000 0: 85000000000 0: 850000000 0: 8500000000 0: 850000000 0: 8500000000 0: 8500000000 0: 85000000000 0: 8500000000 0: 8500000000 0: 85000000000 0: 8500000000 0: 8500000000 0: 85000000000 0: 85000000000 0: 85000000000 0: 850000000000	personal_station_evcharging_test Charging on D. 1 Rate for charge: Rate for WM-50.5kWh; for end charging Timed charging Rate for WM-50.5kWh/5kate for minutes1:0.0h; KConstant charge Balance payment 1500.02 Balance payment 1500.02	personal_station_evcharging_test Charging 0:0 53000400002 Charging 0:0 10 Rate for kwh03.5kWh; Inde statege Timest starging Rates Rates for kwh03.5kWh;Rate for minute\$1.00th; 1Constant charge Balence payment \$300.00 Texture	personal_station_evcharging_test Charging on Di Rate for dwage. Rate for WM-50.50MH. Intered charging Timed charging Intered	< Charge	
Full stop Constant charge Timed charging	Constant charge Constant charge Timed charging Rates Rate for Wh/30.5/Wh/slate for minute/\$1.00/h; IConstant charge	Rates Constant charge Timed charging Interference Rates Rates to Whide StrWin/Rate for minute \$1:00 ht. IConstant charge Balance payment \$1:00.00	Constant charge Tined charging Constant charge Rates Rate for WM-80.5/WM-Rate for minute/\$1.00/ht Constant charge Balance payment \$100.00 Process	Tende charging	personal_station_evcharging_test Charging ID: S520062400062 Charging gun ID: 1 Rate for charge: Rate for WWh\$0.5/W/h;	Diste
	Rates Rate for WMr50 5/WMrRate for minute\$1.00/h; ICOnstant charge	IRates Rate for KMN-50.5NMM-Rute for minute \$1.00m (Constant: charge Balance payment: \$100.00 Restage	Rates Rate for WM-50.5WM-50.4E for minute\$1.00/h: Constant charge Bildence payment \$200.00 Technol	Rates Rote for WM-50.5/WM-Rate for minute \$1.00h; CConstant Charge Balance payment \$100.00 Protocol	Full stop Constant charge Timed charging	
Bilance payment \$50000						
Balance payment \$300,00 Probage					Start charging	

Atlas EV Charger 7/11kW

(3) Σύρετε την κάρτα για φόρτιση

Σύρετε την κάρτα που προστέθηκε για να ξεκινήσει η φόρτιση.

Έναρξη φόρτισης:

Plug the gun (Συνδέστε το πιστόλι) --> τοποθετήστε την κάρτα στην περιοχή σάρωσης της κάρτας και αφαιρέστε την μετά την εκκίνηση του φορτιστή.

Τερματισμός φόρτισης:

Τοποθετήστε την κάρτα στην περιοχή σάρωσης της κάρτας και αφαιρέστε την κάρτα μετά την εκκίνηση του φορτιστή --> take out the charging gun (αφαιρέστε το πιστόλι φόρτισης).



Βασικές πληροφορίες

Μονοφασικός φορτιστής ΕΡ

Καλώδιο εισόδου: ΡΕ Ν L1 Ονομαστική ένταση ρεύματος: 32Α Ονομαστική τάση: 230V±20% ΕΡ Θερμοκρασία λειτουργίας: -40°C~60°C Προστασία έκδοσης καλωδίου: IP65 Προστασία έκδοσης υποδοχής: IP55 Τριφασικός φορτιστής ΕΡ Καλώδιο εισόδου: ΡΕ Ν L1 L2 L3 Ονομαστική ένταση ρεύματος: 16Α Ονομαστική τάση: 400V±20% ΕΡ Θερμοκρασία λειτουργίας: -40°C~60°C Προστασία έκδοσης καλωδίου: IP65 Προστασία έκδοσης υποδοχής: IP55



ΣΗΜΕΙΩΣΕΙΣ





ΣΗΜΕΙΩΣΕΙΣ









